



# TIME EQUIPMENT CORP.

131-16 101st Avenue, Richmond Hill, NY 11419

(718)441-8000 Fax (718)441-8292

www.timeequipment.net

## TIME CHANGE / DAYLIGHT SAVINGS DIRECTIONS FOR PIX-10, PIX-20, PIX-21, PIX-22

1. On the bottom right side of the clock there is a square recess. Inside the recess is the Reset button. Hold the Reset button until the screen goes blank and continue holding it while you press the Right button on the front of the clock.
2. While holding the Right button release the Reset button.
3. When **Prog** appears in the display release the Right button.
4. Press Right button and you will see **0000** in the display.
5. First Digit - press Left button 8 times until you see 8 then press Right button.
6. Second Digit – needs no change so press Right button.
7. Third digit - press Left button 8 times until you see 8 then press Right button.
8. Fourth digit - press Left button 8 times until you see 8 then press Right button.
9. Now all the digits will flash **8088** - press Right button again and the display will show **date**.
10. Press the Left button and the display will show **CLoc**.
11. Press the Right button twice and you will see the hour flashing - press the Left button until the correct hour appears - note that this is in military time, e.g. 4pm is 16.
12. When you see the correct hour press the Right button. You will see the minute flashing. Change if necessary with the Left button else press the Right button twice.
13. Press the Left button and you will see **bdIt** in the display. Press the Right button.
14. You will see a 2 digit year flashing. Press the Left button until you see **18** then press the Right button.
15. You will see a 2 digit month flashing. Press the Left button until you see **03** then press the Right button.
16. You will see a 2 digit day of month flashing. Press the Left button until you see **11** then press the Right button twice.
17. Press the Left button and you will see **EdIt** in the display. Press the Right button.
18. You will see a 2 digit year flashing. Press the Left button until you see **18** then press the Right button.
19. You will see a 2 digit month flashing. Press the Left button until you see **11** then press the Right button.
20. You will see a 2 digit day of month flashing. Press the Left button until you see **04** then press the Right button twice.
21. Press the Left button until you see **End** in the display then press the Right button.