

PIX-28 Time Equipment Corp. 718.441.8000

Changing the Begin Date for Daylight Savings Times: Other Options Menu

Note that in 2007 the standard for DST changes to a different start date and end date. The steps below correct the change in the new start date for DST. The new start date and end date need only be changed once, since the clock's rolling calendar function auto-calculates the start date and end date for DST every year thereafter.

About the DST Change:

From 1986 to 2006, DST started the first Sunday in April and ended the last Sunday in October.

Starting in 2007, DST starts the second Sunday in March and ends the first Sunday in November.

1. Press the PROGRAM button for two seconds, then the CHANGE button until 0t hr P5 flashes in the display.
2. Press the ENTER button.
3. Press the CHANGE button until bdLt 16 (begin Daylight Saving Time Date) flashes in the display.
4. Press the ENTER button.
5. The display shows the current month, date and year for the beginning of DST. The year flashes, indicating the year is the first part of the DST Begin Date that can be adjusted.
6. Press the CHANGE button until the year shows the correct year for the beginning year for the DST modification.
7. Press ENTER. The date flashes.
8. Press the CHANGE button until the date shows the correct date for the beginning date for the DST modification.
9. Press ENTER. The month flashes.
10. Press the CHANGE button until the month shows the correct month for the beginning month for the DST modification.
11. Press ENTER.
12. When the display flashes the correct selection, press the ENTER button, and then the PROGAM button, to save changes and exit the DST function.

Changing End Date for DST: Other Options Menu

Note that in 2007 the standard for DST changes to a different start date and end date. The steps below correct the change in the new end date for DST. The new start date and end date need only be changed once, since the clock's rolling calendar function auto-calculates the start date and end date for DST every year thereafter.

1. Press the PROGRAM button for two seconds, then the CHANGE button until 0t hr P5 flashes in the display.
2. Press the ENTER button.
3. Press the CHANGE button until EdLt 17 (end Daylight Saving Time Date) flashes in the display.
4. Press the ENTER button.
5. The display shows the current month, date and year for the end of DST. The year flashes, indicating the year is the first part of the DST End Date that can be adjusted.
6. Press the CHANGE button until the year shows the correct year for the beginning year for the DST modification.
7. Press ENTER. The date flashes.

8. Press the CHANGE button until the date shows the correct date for the beginning date for the DST modification.
9. Press ENTER. The month flashes.
10. Press the CHANGE button until the month shows the correct month for the beginning month for the DST modification.
11. Press ENTER.
12. When the display flashes the correct selection, press the ENTER button, and then the PROGRAM button, to save changes and exit the DST function.

Setting Clock Time

Note: When setting the clock's time, seconds are fixed at 00 as the beginning point and cannot be changed. The seconds will start incrementing from 00 when the ENTER button is pressed.

1. Press the PROGRAM button for two seconds, then the CHANGE button until CLoc P2 flashes in the display.
2. Press the ENTER button.
3. Press the CHANGE button until the correct minute appears, then press the ENTER button.
4. Press the CHANGE button until the correct hour and time of day appears, then press the ENTER button.
5. When the display flashes the correct time, press the ENTER button.
6. When the display flashes CLoc P2, press the CHANGE button to move to the Daylight Saving Time Setting or press the PROGRAM button to exit the Program Mode.