

Model PIX3000 – Time Equipment Corp 718.441.8000

Daylight Savings Instructions

1. Remove the cover
2. Press PROGRAM
3. You will see an arrow at the top of the display
4. Press CHANGE twice so the arrow is at the HOUR MINUTE box
5. Press ENTER
6. The hour will be flashing - press CHANGE until the correct hour is showing
7. Press ENTER
8. The minutes will be flashing - press CHANGE until the correct minute is showing
9. Press ENTER - the hour and minute will both be flashing
10. Press ENTER again - you will see the arrow at the top of the display under the BEGIN DAYLIGHT SAVING box
11. Press ENTER - you will see the year flashing - press CHANGE until the display shows **18**
12. Press ENTER - you will see the month flashing - press CHANGE until the display shows **03**
13. Press ENTER - you will see the date flashing - press CHANGE until the display shows **11**
14. Press ENTER - everything will be flashing. Press ENTER again and you will see the arrow under the END DAYLIGHT SAVINGS box
15. Press ENTER - you will see the year flashing - press CHANGE until the display shows **18**
16. Press ENTER - you will see the month flashing - press CHANGE until the display shows **11**
17. Press ENTER - you will see the date flashing - press CHANGE until the display shows **04**
18. Press ENTER - everything will be flashing. Press ENTER again and you will see the arrow at the top of the display
19. Press PROGRAM
20. Put the cover back on