

Model TCX-11/21/22 Time Equipment Corp 718.441.8000

About the Daylight Savings Time Change:

 
 
From 1986 to 2006, DST started the first Sunday in April and ended the last Sunday in October. Starting in 2007, DST starts the second Sunday in March and ends the first Sunday in November.

Setting the Clock Time

Note: Use a 24 hour and 60 minute format when setting the time.

For example, 2:00 PM = 14:00.



1. Press the PROGRAM button for two seconds.
2. Press the CHANGE button until the display flashes P2 CL OC. Press the ENTER button.
3. Press the CHANGE button until the correct hour appears, then press the ENTER button.



4. Press the CHANGE button until the correct minute appears, then press the ENTER button.
5. When the display flashes the correct time, press the ENTER button.
6. Press the PROGRAM button to save the change.

How to Set the Begin Date for DST

  1. Press the PROGRAM button for two seconds.
2. Press the CHANGE button until the display flashes P5 0t hr . Press the ENTER button.
3. Press the CHANGE button until the display flashes 16 bd Lt. Press the ENTER button.



4. To change the year, press the CHANGE button until the correct year “18” appears, then press the ENTER button. If the year shown is correct, press the ENTER button.
5. To change the month, press the CHANGE button until the correct month “03” appears, then press the ENTER button.
6. If the month shown is correct, press the ENTER button.
7. To change the date, press the CHANGE button until the correct date “11” appears, then press the ENTER button.
8. If the date shown is correct, press the ENTER button.
9. When the display flashes the correct year, month and date, press the ENTER button.
10. Press the PROGRAM button to complete the process.

How to Set the End Date for DST

1. Press the PROGRAM button for two seconds.
2. Press the CHANGE button until the display flashes P5 0t hr. Press the ENTER button.
3. Press the CHANGE button until the display flashes 17 EdLt . Press the ENTER button.



4. To change the year, press the CHANGE button until the correct year “18” appears, then press the ENTER button. If the year shown is correct, press the ENTER button.
5. To change the month, press the CHANGE button until the correct month “11” appears, then press the ENTER button. If the month shown is correct, press the ENTER button.
6. To change the date, press the CHANGE button until the correct date “04” appears, then press the ENTER button. If the date shown is correct, press the ENTER button.
7. When the display flashes the correct year, month and date, press the ENTER button.
8. Press the PROGRAM button to complete the process.